Surge Metal Curtain Track

BLINDS DIRECT

FITTING COMPONENTS

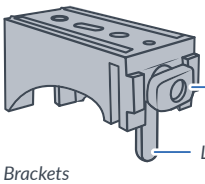

Brackets

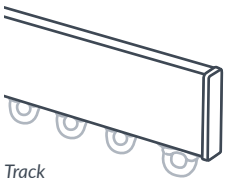
Track

Track Connector (Only supplied with tracks over 280cm)

Divider Cover Clip (Only supplied with curved tracks, over 280cm)

REQUIRED TOOLS & MATERIALS (*Not Supplied*)

Metal tape measure


Spirit level

Pencil

Drill


Fixing Screws and Wall Plugs

Philips screwdriver

Tracks Over 280cm

Tracks over 280cm are provided in two pieces with a connector for easy assembly.

If your track has been supplied as a single piece, please proceed to the next step.

NOTE:
Only applicable to tracks wider than 280cm.

1. Simply slide the loose track onto the connector until it's flush with the other side of the track.
2. Tighten the loose screw until it's secure.

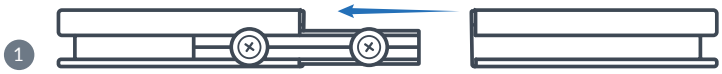

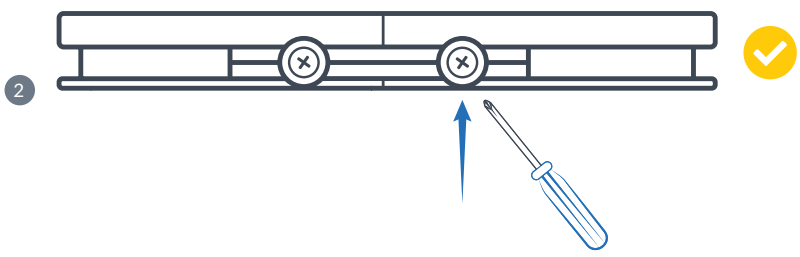

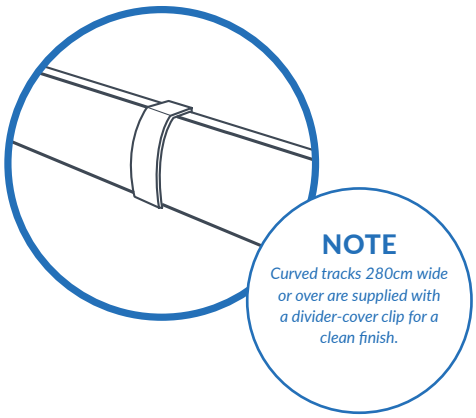

NOTE
Curved tracks 280cm wide or over are supplied with a divider-cover clip for a clean finish.

1

Positioning Your Track

If securing your track to the wall, we advise positioning it at least 150mm above the window or recess.

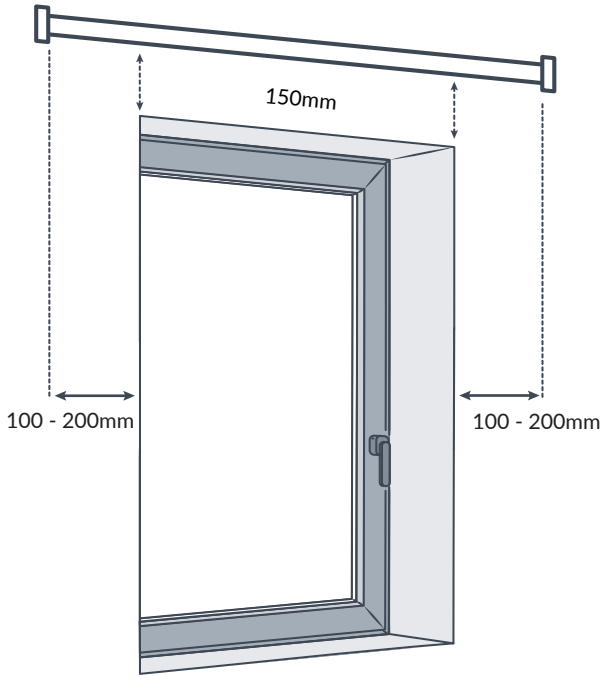

2

Spacing Your Brackets

Mark out the positions for your brackets, ensuring an even spacing between each one to ensure a secure installation.

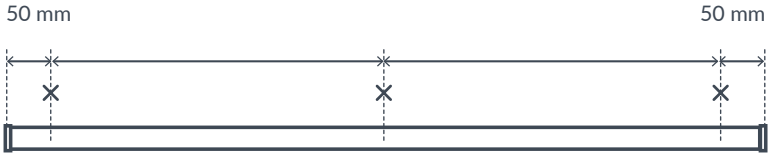

3

Fixing Your Brackets

Use your screws and wall plugs to affix your brackets securely to the wall or ceiling in the marked positions.

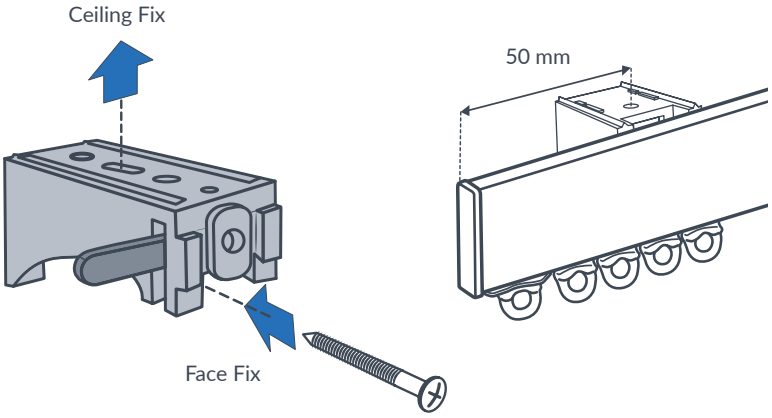

4

Click & Lock Into Position

1. Before attaching the track to the bracket, ensure the bracket's toggle is in the vertical 'Unlocked' position. Then, position the track at a 30-45 degree angle above the brackets. Push the track forward and down until it is flush with the bracket's 'Locking Key'.

2. Finally push the toggle into its horizontal "Locked" position.

Repeat this process for each bracket, ensuring all are locked into place

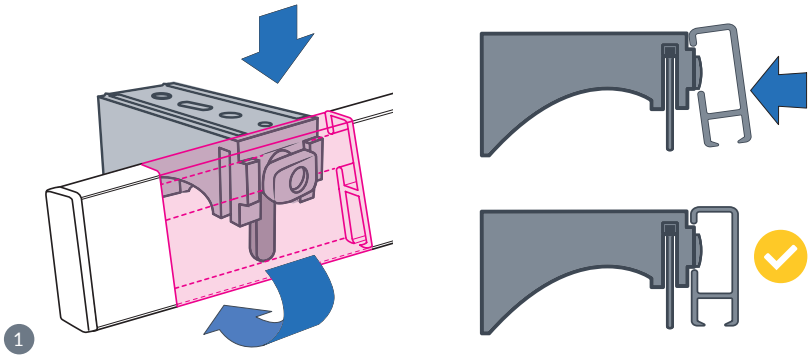

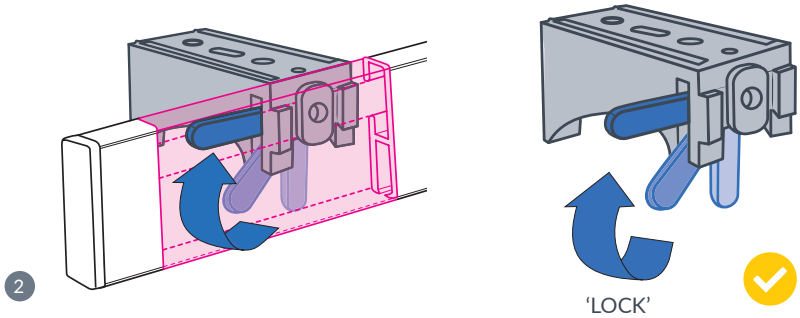

5

Your Track Is Ready

The track is now ready for your curtains to be hung.