




## FITTING COMPONENTS



Brackets x4

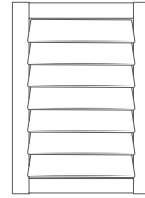


Shutters

Please note, you will need a credit card / loyalty card of sort to help with the installation.

### 1

#### Installing The Brackets


First, attach the brackets to the window using a credit card as a spacer, and slide the bracket down into the window gasket seal. Repeat on all four corners of the window.

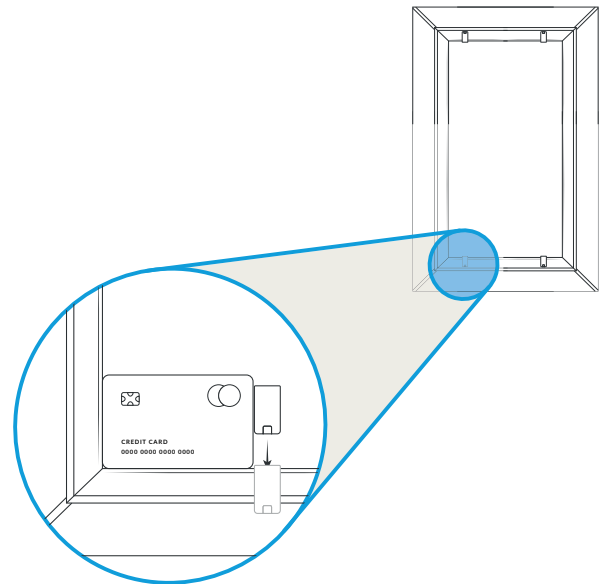

### 2

#### Tension Hook The Brackets


Now that the brackets are in place, you can fit the shutters. Line up the cutout on the bottom of the frame with the bracket.

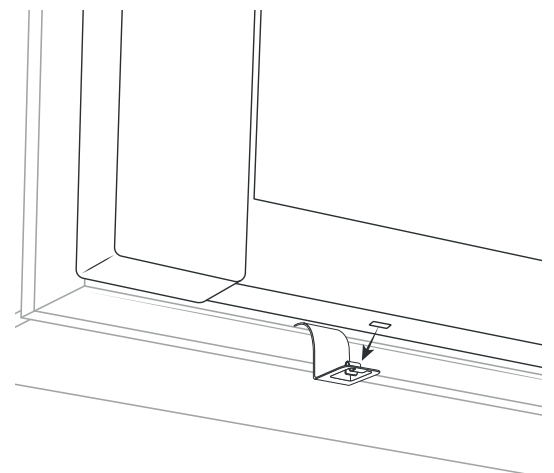

3

### Fitting Bottom Edge Of Shutter

Next, slot the left and right cutouts into the bottom brackets. Once this is done, move onto the top brackets.

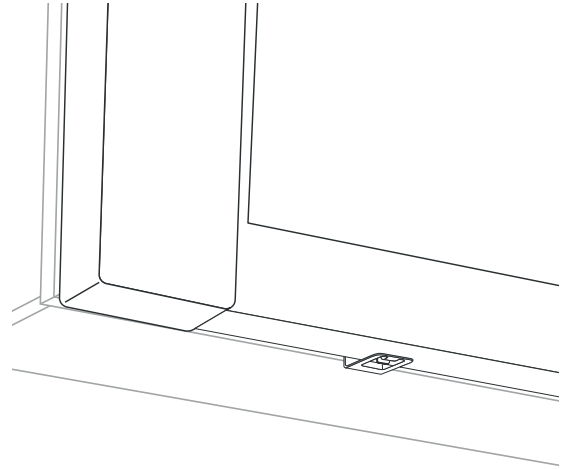

4

### Fit Top Edge Of Shutter

Finally, push the top of the frame into the top brackets. The window is still fully operational, and your Perfect Fit shutter has been successfully installed.

